



Favolite Stage Lighting Co., Ltd

Vader Pro 350

(300W LED,Spot/Beam/Wash/with

Channel	Function	DMX value	Feacture
25CH			
1	Pan	0~255	
2	Pan Fine	0~255	
3	Tilt	0~255	
4	Tilt Fine	0~255	
5	Colour Wheel	0~7	No Colour
		8~15	Colour1
		16~23	Colour2
		24~31	Colour3
		32~39	Colour4
		40~47	Colour5
		48~55	Colour6
		56~63	Colour7
		64~71	Colour8
		72~79	Colour9
		80~87	Colour10
		88~95	Colour11
		96~103	No Colour
		104~221	Colour Arbitrary Positioning
		222~238	Rotate Left
		239~255	Rotate Right
6	Cyan	0~255	
7	Magenta	0~255	
8	Yellow	0~255	
9	Colour Temperature	0~255	
10	Fix Gobo	0~3	No Gobo
		4~7	Gobo1
		8~11	Gobo2
		12~15	Gobo3
		16~19	Gobo4
		20~23	Gobo5
		24~27	Gobo6
		28~31	Gobo7
		32~35	Gobo8
		36~39	Gobo9
		40~43	Gobo10
		44~47	Gobo11
		48~51	Gobo12
		52~55	Gobo13
		56~59	No Gobo
		60~67	Gobo1 Shake From Slow To Fast
		68~75	Gobo2 Shake From Slow To Fast
		76~83	Gobo3 Shake From Slow To Fast
		84~91	Gobo4 Shake From Slow To Fast

Favolite Stage Lighting Co., Ltd

		92~99	Gobo5 Shake From Slow To Fast
		100~107	Gobo6 Shake From Slow To Fast
		108~115	Gobo7 Shake From Slow To Fast
		116~123	Gobo8 Shake From Slow To Fast
		124~131	Gobo9 Shake From Slow To Fast
		132~139	Gobo10 Shake From Slow To Fast
		140~147	Gobo11 Shake From Slow To Fast
		148~155	Gobo12 Shake From Slow To Fast
		156~163	Gobo13 Shake From Slow To Fast
		164~167	No Gobo
		168~211	Rotate Left
		212~255	Rotate Right
11	R-Gobo	0~7	No Gobo
		8~15	Gobo1
		16~23	Gobo2
		24~31	Gobo3
		32~39	Gobo4
		40~47	Gobo5
		48~55	Gobo6
		56~63	Gobo7
		64~71	No Gobo
		72~79	Gobo1 Shake From Slow To Fast
		80~87	Gobo2 Shake From Slow To Fast
		88~95	Gobo3 Shake From Slow To Fast
		96~103	Gobo4 Shake From Slow To Fast
		104~111	Gobo5 Shake From Slow To Fast
		112~119	Gobo6 Shake From Slow To Fast
		120~127	Gobo7 Shake From Slow To Fast
		128~135	No Gobo
		136~195	Rotate Left
		196~255	Rotate Right
12	Gobo Rotation	0~3	No Effect
		4~123	R-Gobo Angle
		124~187	Rotate Left
		188~191	Stop
		192~255	Rotate Right
13	Dimmer	0~255	
14	Strobe	0~3	Open
		4~67	Open<->Close
		68~99	Close->Open
		100~131	Open->Close
		132~175	Half Open And Half Close
		176~247	Pulse Strobe
		248~251	Random Strobe1
		252~255	Random Strobe2
15	Dimer Mode	0~63	Refresh Rate 1200 Auto
		64~127	Refresh Rate 1200 Fast
		128~191	Refresh Rate 13672 Auto
		192~255	Refresh Rate 13672 Fast

Favolite Stage Lighting Co., Ltd

16	Prism	0~31	No Prism
		32~255	Prism1 On
17	Prism Rotation	0~3	Prism Stop
		4~123	Prism Angle
		124~187	Rotate Left Fast To Slow
		188~191	Stop
		192~255	Rotate Right Slow To Fast
18	Zoom	0~255	
19	Focus	0~255	
20	Auto Focus Distance	0~3	Do Not Use Auto Focus
		4~63	5M
		64~127	7.5M
		65~191	10M
		192~255	15M
21	Auto Focus Distance	0~255	Continuous Adjustment Within The Above Distance Range
22	Iris Open	0~127	Open To Close
		128~135	Close
		136~173	Iris Movement 1
		174~211	Iris Movement 2
		212~249	Iris Movement 3
		250~255	Close
23	Frost	0~9	No Effect
		10~255	Liner Frost
24	Scan Speed	0~255	Fast To Slow
25	Control	0~19	No Used
		20~29	Reset All
		30~39	Reset Pan,Tilt
		40~49	Reset Colour,Gobo,CMY,CTO
		50~59	Reset Zoom,Focus,Prism,Frost
		60~69	No Effect
		70~74	Display Default
		75~79	Display Off(Don'T Keep After Shutdown)
		80~84	Display On(Don'T Keep After Shutdown)
		85~89	Fan Speed Low(Keep After Shutdown)
		90~94	Fan Speed Medium(Keep After Shutdown)
		95~99	Fan Speed High(Keep After Shutdown)
Please hold the value for more than 8 seconds to take effect,and then return to 0 to avoid repeated activation.			